

---

# LINETRAXX® CTUB100 series

AC/DC sensitive measuring current transformers (type B)





### Product description

The CTUB100 series measuring current transformers are combinations of CTBC... measuring current transformer cores and CTUB10... electronic modules, which convert AC and DC currents into an evaluable measurement signal. The measurement signals can be evaluated using devices of the RCMA420/423, RCMS410, RCMS425, RCMS460/490 or EDS441LAB series. The measuring current transformers are connected to the respective devices via a 2- or 6-core cable. They can be used in DC, AC, and 3(N)AC systems.

The CTUB101-CTBCxx measuring current transformers are intended for connection to devices of the RCMA420/423 series and are supplied directly from the evaluator with the supply voltage DC  $\pm 12$  V via the 6-core cable.

The CTUB102-CTBCxx measuring current transformers are intended for connection to an RCMS4... and EDS441LAB. The CTUB105-CTBCxx measuring current transformer is intended for connection to an RCMS4.... If the CTUB102-CTBCxx measuring current transformers are connected to an RCMS4... system or EDS441LAB, a DC 24 V power supply unit is required for the measuring current transformers, which is available as an accessory.

The measuring current transformer cores of the CTBC...P series feature an integrated magnetic shield and are suitable for applications with high load currents or inrush currents.

### Device features

- Combined test and reset button
- Multicolour LED for operation, fault and status messages
- Exchangeable electronic module without mechanical separation of the primary conductors
- Extension/retrofitting or modification of functionalities in case of changed monitoring requirements
- Insensitive to load currents due to full magnetic shield (CTBC...P only)
- Monitoring of the connection to the measuring current transformer
- Supply voltage DC  $\pm 12$  V/DC 24 V
- CTUB10x-CTBC... for residual current monitoring systems of the RCMS4... series as well as for RCMA420/423 and residual current monitors
- CTUB10x-CTBC...P for residual current monitoring systems of the RCMS4... series as well as for RCMA420/423 residual current monitors. Can be used for very high system-related peak load currents.

### Certifications



## Variants

A measuring current transformer always consists of a measuring current transformer core and an electronic module, which is required for signal conversion and can be connected to an evaluator. Each electronic module can be combined with all measuring current transformer cores.

### Electronic modules

- **CTUB101**

Electronic module for conversion of the residual current signal from the measuring current transformer core for the connection to RCM devices via terminals S1 and S2, supply voltage DC  $\pm 12$  V.

- **CTUB102**

Electronic module for conversion of the residual current signal from the measuring current transformer core for the connection to RCM and EDS devices via terminals S1 and S2, supply voltage DC 24 V.

*(The CTUB102 replaces the CTUB104 for applications with EDS441-LAB)*

- **CTUB105**

Electronic module for conversion of the residual current signal from the measuring current transformer core for the connection to RCM devices via terminals S1 and S2, supply voltage DC 24 V.

### Measuring current transformer cores

- **CTBC20**

Measuring current transformer core, internal diameter 20 mm

- **CTBC20P**

Measuring current transformer core shielded, internal diameter 20 mm

- **CTBC35**

Measuring current transformer core, internal diameter 35 mm

- **CTBC35P**

Measuring current transformer core shielded, internal diameter 35 mm

- **CTBC60**

Measuring current transformer core, internal diameter 60 mm

- **CTBC60P**

Measuring current transformer core shielded, internal diameter 60 mm

- **CTBC120**

Measuring current transformer core, internal diameter 120 mm

- **CTBC120P**

Measuring current transformer core shielded, internal diameter 120 mm

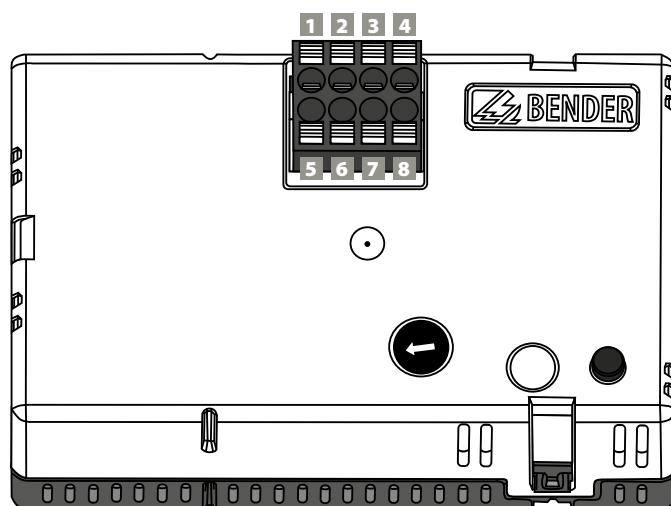
- **CTBC210**

Measuring current transformer core, internal diameter 210 mm

- **CTBC210P**

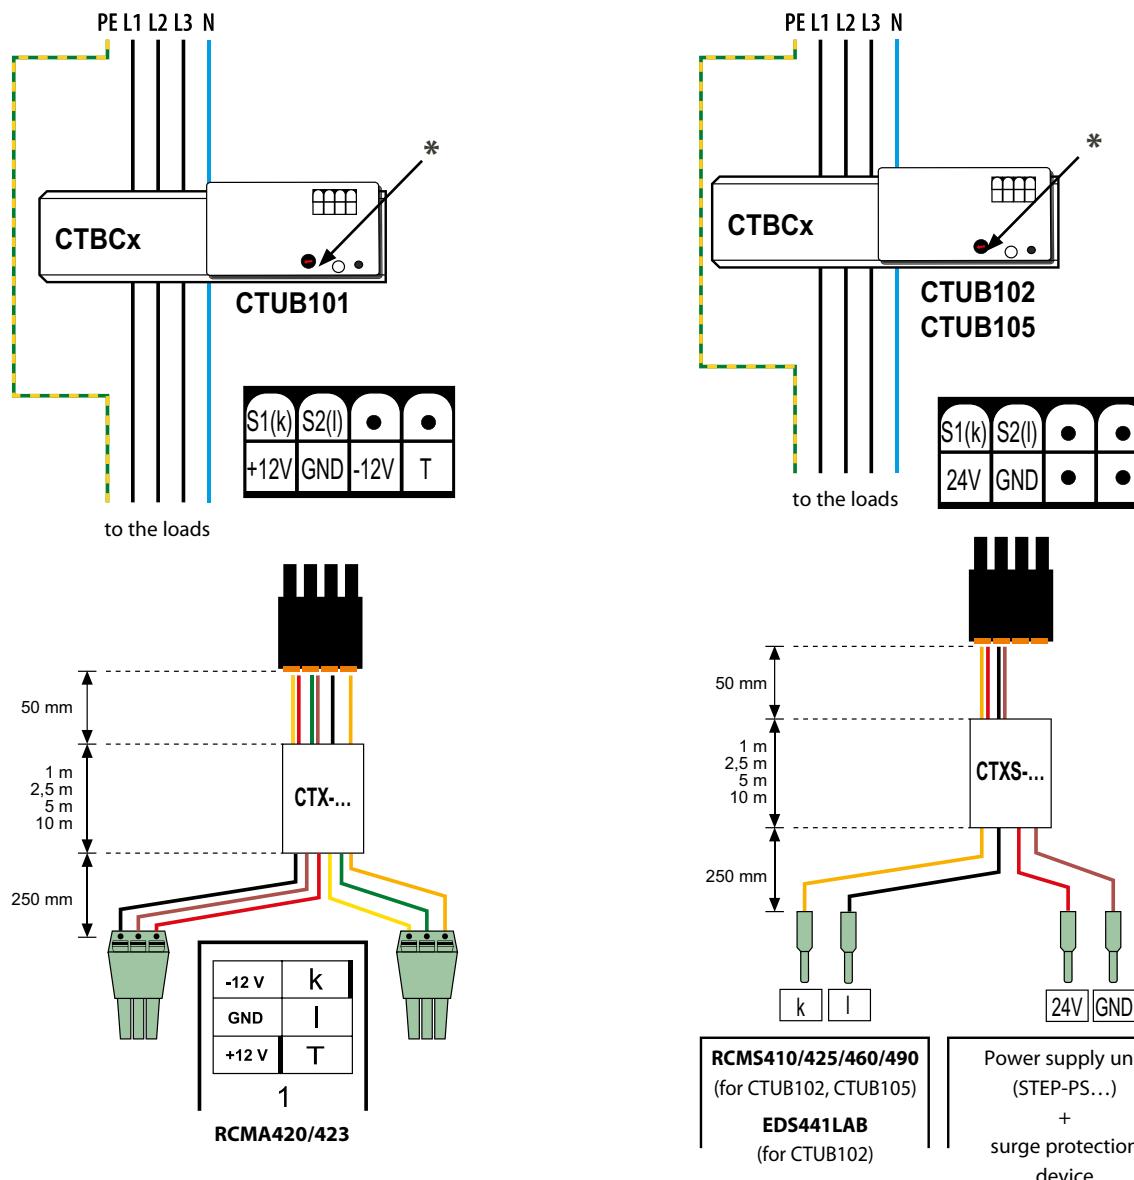
Measuring current transformer core shielded, internal diameter 210 mm

## Wiring diagram of the electronic module



Connection CTUB10x								
Type	1	2	3	4	5	6	7	8
CTUB101	S1 (k)	S2 (l)	•	•	+12V	GND	-12V	T
CTUB102	S1 (k)	S2 (l)	•	•	24V	GND	•	•
CTUB105	S1 (k)	S2 (l)	•	•	24V	GND	•	•

### Wiring diagram



\* The measuring range must be selected according to the response value  $I_{\Delta n}$  set on the RCM... evaluator. If, however, a larger measuring range is selected, the resolution deteriorates.

**CTUB102 with EDS441-LAB:** Location current EDS441-LAB max. 25 mA. Adjust the measuring range on the measuring current transformer to this range.

**CTUB105:** Measuring range 3 is fixed and cannot be changed.

Setting measuring range (not possible with CTUB105)				
#	Potentiometer setting	Response value RCM/RCMS	Measuring range rms	Measuring range peak
1		$I_{\Delta n} \leq 0.1 A$	0...450 mA	0...900 mA
2		$0.1 A < I_{\Delta n} \leq 0.5 A$	0...0.75 A	0...3.5 A
3		$I_{\Delta n} > 0.5 A$	0...10 A	0...20 A

\*\* – The use of a type 2 surge protection device (SPD) is mandatory due to possible impulse voltages and in order to comply with normative requirements.

- The surge protection device must be connected upstream of the power supply unit on the supply side.
- The surge protection device 7P.22.8.275.1020 from Finder or an equivalent alternative can be used.

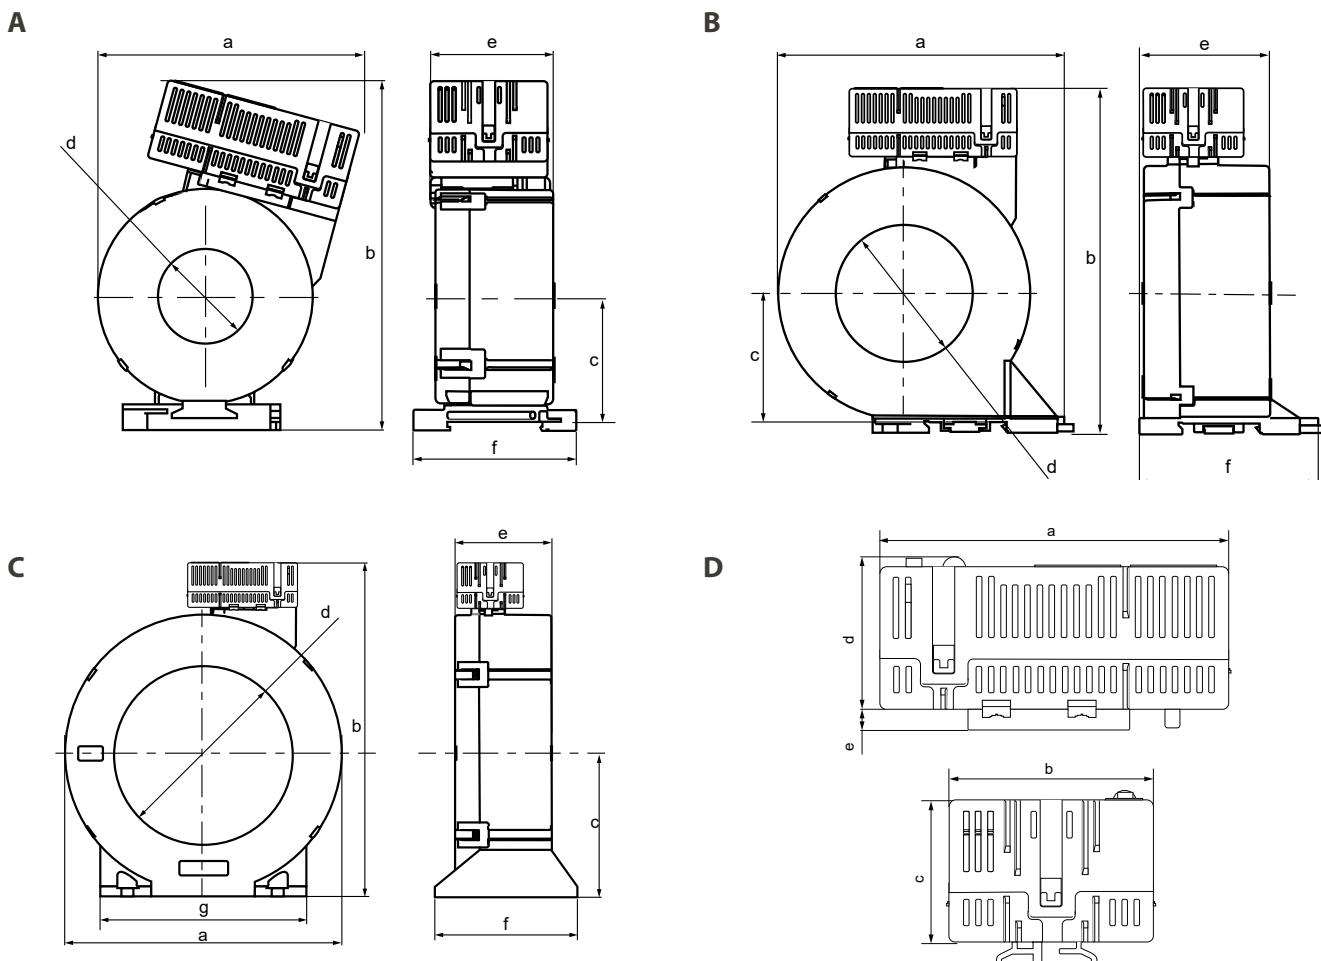
#### Caution!

When using several CTUB100 measuring current transformers, the power supply (24V, GND) must not be daisy-chained from current transformer to current transformer but should be star-shaped (e.g. using a potential distributor).

**System states: LED**

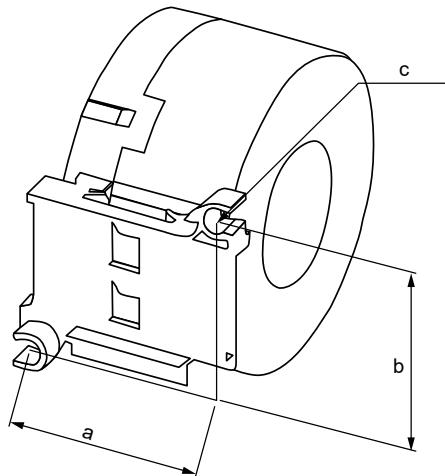
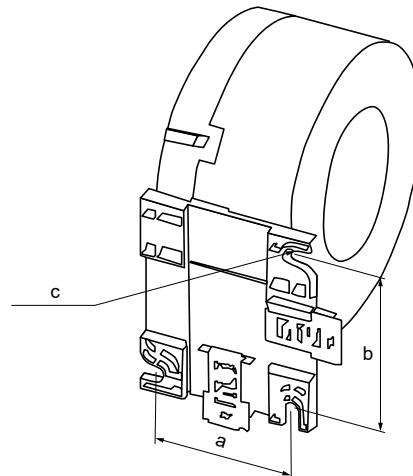
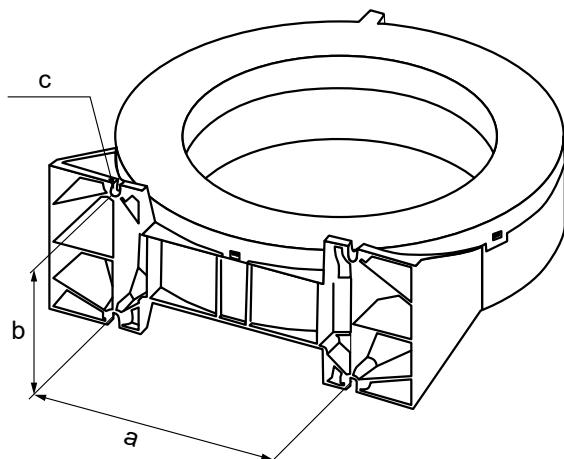
The LED indicates the system state by means of colours and lighting/flashing.

System state	LED		Notes
	green (ON)	red (alarm)	
Device switched off	off	off	Device is deenergised
Normal operating state	lights	off	The device is supplied with the specified voltage and the measuring current transformer core is connected to the electronic module.
Device error	off	flashes	The device is supplied with the specified voltage but there is no connection to the measuring current transformer core or some other device error has occurred.

**Dimension diagrams**

Dimensions (mm)								
	Type	a	b	c	d	e	f	
A	CTUB10...-CTBC20(P)	75	83	37	Ø 20	46	60.5	-
	CTUB10...-CTBC35(P)	97	130	47	Ø 35	46	61	-
B	CTUB10...-CTBC60(P)	126	151	57	Ø 60	56	78	-
C	CTUB10...-CTBC120(P)	188	225	96	Ø 120	65	96	139
	CTUB10...-CTBC210(P)	302	339	153	Ø 210	67	113	277
D	CTUB10...	74	44	30	32	4.6	-	-

Tolerance: ±0.5 mm

**Mountings****CTBC20(P)/CTBC35(P)****CTBC60(P)****CTBC120(P)/CTBC210(P)**

Dimensions (mm)			
Type	a	b	c
CTBC20(P)	49	49.80	2 x ø 5.5
CTBC35(P)	49	49.80	2 x ø 5.5
CTBC60(P)	56	66	3 x ø 6.5
CTBC120(P)	103	81	4 x ø 6.5
CTBC210(P)	180	98	4 x ø 6.5

**Technical data****Insulation coordination acc. to IEC 60664-1/IEC 60664-3**

## Definitions:

Measuring circuit (IC1)	primary conductors routed through the current transformer
Secondary (IC2)	connections terminal block
Rated insulation voltage	800 V
Overshoot category	III
Area of application	≤ 2000 m AMSL
Rated impulse voltage:	
IC1/IC2	8 kV
Rated insulation voltage (reinforced insulation):	
IC1/IC2	800 V
Pollution degree	2

**Supply voltage**

CTUB101	
Description	+12 V, GND, -12 V
Supply voltage $U_s$	DC ±12 V
Operating range of $U_s$	±2 %
Ripple $U_s$	≤ 1 %
Power consumption	≤ 2.5 W
CTUB102, CTUB105	
Description	24 V, GND
Supply voltage $U_s$	DC 24 V
Operating range of $U_s$	±20 %
Ripple $U_s$	≤ 1 %
Power consumption	≤ 2.5 W
Inrush current	1A for 1 ms

**Measuring circuit**

Internal diameter measuring current transformer	see dimension diagrams
Rated current /	RCM application / MRCD application
CTBC20 at $I_{dn} \geq 30$ mA	63 A / 40 A
CTBC20 at $I_{dn} \geq 300$ mA	80 A / 63 A
CTBC20P	80 A / 80 A
CTBC35 at $I_{dn} \geq 30$ mA	125 A / 80 A
CTBC35 at $I_{dn} \geq 300$ mA	160 A / 125 A
CTBC35P	160 A / 160 A
CTBC60 at $I_{dn} \geq 30$ mA	200 A / 160 A
CTBC60 at $I_{dn} \geq 300$ mA	400 A / 250 A
CTBC60P	400 A / 320 A
CTBC120 at $I_{dn} \geq 100$ mA	400 A / 330 A
CTBC120P at $I_{dn} \geq 100$ mA	630 A / 630 A
CTBC210 at $I_{dn} \geq 300$ mA	630 A / 630 A
CTBC210P at $I_{dn} \geq 100$ mA	630 A / 630 A
CTBC210P at $I_{dn} \geq 300$ mA	1000 A / 1000 A
Measurement accuracy	±1 % of full scale value
Test winding	yes
Rated continuous thermal current <sup>1)</sup> $I_{cth}$	125 A
at UL applications	30 A
Rated short-time thermal current <sup>1)</sup> $I_{th}$	2.4 kA/1 s
Rated dynamic current <sup>1)</sup> $I_{dyn}$	6 kA/40 ms

<sup>1)</sup> refers to the residual current

**i** Residual current > 6 kA: Device defect CTUB1... message via LED.  
There is no danger of fire or electric shock.

**Possible response values (set on the evaluator)**

CTBC20, CTBC20P	10...500 mA
CTBC35, CTBC35P, CTBC60, CTBC60P	30 mA...10 A
CTBC120, CTBC120P, CTBC210P	100 mA...10 A
CTBC210	300 mA...10 A

**Measuring ranges CTUB101, CTUB102**

Measuring range 1 ( $I_{dn} \leq 0.1$ A)	0...900 mA (peak)
Measuring range 2 ( $0.1$ A < $I_{dn} \leq 0.5$ A)	0...3.5 A (peak)
Measuring range 3 ( $I_{dn} > 0.5$ A)	0...20 A (peak)

**Measuring range CTUB105**

Measuring 3 ( $I_{dn} > 0.5$ A)	0...20 A (peak)
---------------------------------	-----------------

**Indication**

Multicolour LED	table on page Seite 5
-----------------	-----------------------

**Output**

Name	S1 (k), S2 (l)
Scaling	400 mV/1 A
Max. voltage	±10 V
Output device error	
CTUB101, 102	Max. full scale value
CTUB105	8 A
Max. connector length	10 m
Output resistance	172 Ω

**Input**

Name	T (for CTUB101 only)
Current load	< 300 mA

**Environment/EMC**

EMC	IEC 62020-1
Operating temperature	-25...70 °C
<b>Classification of climatic conditions acc. to IEC 60721</b>	
Stationary use (IEC 60721-3-3)	3K22
Transport (IEC 60721-3-2)	2K11
Long-term storage (IEC 60721-3-1)	1K22

**Classification of mechanical conditions acc. to IEC 60721**

Stationary use (IEC 60721-3-3)	3M11
Transport (IEC 60721-3-2)	2M4
Long-term storage (IEC 60721-3-1)	1M12

**Connection**

Max. connection length	10 m
Connecting cables are optionally available. Use 60/75 °C copper lines only.	

**Terminal block**

Manufacturer	Phoenix Contact
Type	DFMC 1.5/4-ST-3.5 BK
The connection conditions of the manufacturer apply.	
Connection properties	
rigid	0.2...1.5 mm <sup>2</sup> (AWG 24...16)
flexible	0.2...1.5 mm <sup>2</sup>
with ferrule	0.25...0.75 mm <sup>2</sup>

**Mounting CTBC...**

Screw type	
CTBC20...60(P)	DIN EN ISO 7045 - M5x
CTBC120...210(P)	DIN EN ISO 7045 - M6

Washer type	
CTBC20...60(P)	DIN EN ISO 7089/7090 - 5
CTBC120...210(P)	DIN EN ISO 7089/7090 - 6

Tightening torque	
CTBC20...35 (P)	0.6 Nm
CTBC60...210(P)	1 Nm

**Other**

Operating mode	continuous operation
Mounting	any position
Degree of protection, internal components (DIN EN 60529)	
	IP40
Degree of protection, terminals (DIN EN 60529)	
	IP20
Flammability class	UL94 V-0
Software	D591
Documentation number	D00362
Weight	
CTUB10x- CTBC20	≤ 230 g
CTUB10x- CTBC20P	≤ 290 g
CTUB10x- CTBC35	≤ 310 g
CTUB10x- CTBC35P	≤ 390 g
CTUB10x- CTBC60	≤ 530 g
CTUB10x- CTBC60P	≤ 690 g
CTUB10x- CTBC120	≤ 1460 g
CTUB10x- CTBC120P	≤ 1820 g
CTUB10x- CTBC210	≤ 4290 g
CTUB10x- CTBC210P	≤ 4940 g

The use of the power supply units listed at "Accessories" is recommended.

The use of a surge protection device is mandatory for these power supply units.

**Ordering details**

Suitable for evaluator	Supply voltage	Current transformer diameter	Shielding	Type	Art. No.
RCMA420 RCMA423	DC $\pm$ 12V	$\varnothing$ 20	—	CTUB101-CTBC20	B78120010
			■	CTUB101-CTBC20P	B78120020
		$\varnothing$ 35	—	CTUB101-CTBC35	B78120012
			■	CTUB101-CTBC35P	B78120022
		$\varnothing$ 60	—	CTUB101-CTBC60	B78120014
			■	CTUB101-CTBC60P	B78120024
		$\varnothing$ 120	—	CTUB101-CTBC120	B78120016
			■	CTUB101-CTBC120P	B78120026
		$\varnothing$ 210	—	CTUB101-CTBC210	B78120018
			■	CTUB101-CTBC210P	B78120028
RCMS410 RCMS425 RCMS460 RCMS490	DC 24V	$\varnothing$ 20	—	CTUB102-CTBC20	B78120011
			■	CTUB102-CTBC20P	B78120021
		$\varnothing$ 35	—	CTUB102-CTBC35	B78120013
			■	CTUB102-CTBC35P	B78120023
		$\varnothing$ 60	—	CTUB102-CTBC60	B78120015
			■	CTUB102-CTBC60P	B78120025
		$\varnothing$ 120	—	CTUB102-CTBC120	B78120017
			■	CTUB102-CTBC120P	B78120027
		$\varnothing$ 210	—	CTUB105-CTBC120P	B78120041
			■	CTUB102-CTBC210	B78120019
EDS441-LAB	DC 24V	$\varnothing$ 20	■	CTUB102-CTBC20P	B78120021
		$\varnothing$ 35	■	CTUB102-CTBC35P	B78120023
		$\varnothing$ 60	■	CTUB102-CTBC60P	B78120025

**Ordering details for accessories and spare parts****Electronic modules**

Supply voltage $U_s$	Type	Art. No.
DC $\pm$ 12 V	CTUB101	B78120050
DC 24 V	CTUB102	B78120051
DC 24 V	CTUB105	B78120054

Required terminals are included in the scope of delivery.

Connecting cables are optionally available.

**Connecting cables**

Length (m)	Connection to	Name	Art. No.
1	RCMA42...	CTX-100	B98110080
2.5		CTX-250	B98110081
5		CTX-500	B98110082
10		CTX-1000	B98110083
1	RCMS4... EDS441-LAB	CTXS-100	B98110090
2.5		CTXS-250	B98110091
5		CTXS-500	B98110092
10		CTXS-1000	B98110093

**Measuring current transformer cores**

Internal diameter	Type	Art. No.
20 mm	CTBC20	B98120001
	CTBC20P	B98120002
35 mm	CTBC35	B98120003
	CTBC35P	B98120004
60 mm	CTBC60	B98120005
	CTBC60P	B98120006
120 mm	CTBC120	B98120007
	CTBC120P	B98120020
210 mm	CTBC210	B98120008
	CTBC210P	B98120021

P = full magnetic shield

The measuring current transformers of the CTUB10x series comply with the requirements of the standard DIN EN 45545-2.

**Accessories**

Name	Art. No.
DIN rail mounting clip for CTBC20 and CTBC20P	B91080111
DIN rail mounting clip for CTBC35 and CTBC35P	B91080112

Included in the scope of delivery

**Suitable system components**

Description	Max. connected current transformers	Type	Art. No.
Voltage supply	4	STEP-PS/1 AC/24 DC/0.5	B94053110
	14	STEP-PS/1 AC/24 DC/1.75	B94053111
	34	STEP-PS/1 AC/24 DC/4.2	B94053112

**Composition example of a measuring current transformer from the individual components****Electronic module: CTUB101****Measuring current transformer core:  
CTBC35****Measuring current transformer:  
CTUB101-CTBC35\***

\* For connection to an evaluator, a complete measuring current transformer is required. Both components can be ordered separately as spare parts.

**Installation instructions for measuring current transformers**

- Do not route any shielded cables through the measuring current transformer.
- Existing protective conductors and low-resistance conductor loops must not be routed through the measuring current transformer!
- Otherwise, high currents could be induced into the conductor loop due to the AC/DC sensitive measuring technology used.
- The connecting cable (supply, secondary connection etc.) must not be routed directly past the current transformer core, otherwise interference pulses may occur.

All current-carrying cables must be routed through the measuring current transformer.	  P1 (K): YE      P2 (L): GY	The primary conductors may only be bent from the specified minimum distance. The minimum bending radius specified by the manufacturers for the conductors used must be observed. * Distance to 90° angle = 2 x outer diameter.	 
Never route an existing protective conductor through the measuring current transformer.	  P1 (K): YE      P2 (L): GY	The cables must be aligned with the centre of the measuring current transformer.	



**Bender GmbH & Co. KG**

Londorfer Straße 65  
35305 Grünberg  
Germany

Tel.: +49 6401 807-0  
[info@bender.de](mailto:info@bender.de)  
[www.bender.de](http://www.bender.de)



© Bender GmbH & Co. KG, Germany  
Subject to change!

The specified standards take into account the  
edition valid until 05.2025 unless otherwise  
indicated.